OFX-4042 Instruction Book



IRT Eurocard

Type OFX-4042

Fibre Optic Splitter

Designed and manufactured in Australia

IRT can be found on the Internet at: http://www.irtelectronics.com

IRT Eurocard Type OFX-4042 Fibre Optic Splitter

Revision History

Revision	Date	Ву	Change Description	Applicable to:
0	11/09/2012	AL	Original Issue.	Serial Numbers
				≥ 1201001

IRT Eurocard Type OFX-4042 Fibre Optic Splitter

Instruction Book

Table of Contents

Section	Page
Revision History	2
Optical Safety	3
General Description	4
Technical Specifications	5
Installation	6
Front and rear layouts	7
Maintenance & Storage	8
Warranty & Service	8
Equipment return	8

This instruction book applies to units later than S/N 1201001.

Optical Safety

The light emitted from the LASER diode used in this system is invisible and may be harmful to the human eye. Avoid looking directly into the fibre optic cable or connectors or into the collimated beam along their axis when the device is in operation.

IRT Eurocard Type OFX-4042 Fibre Optic Splitter

General Description



The OFX-4042 is an optical splitter suitable for use with IRT's complete range of optical fibre transmitters comprising of HD, SD, ASI, L-Band or analogue signals.

The input optical signal is split equally between output allowing two optical receivers to be fed by the one optical transmitter. This allows either two separate locations to receive the input signal optically via the one source, or allows optical fibre redundancy by sending via different paths.

The OFX-4042 is a passive unit that requires no power to operate and is designed to mount in IRT's standard 1RU and 4000 series 3RU frames.

Standard features:

- 50/50 optical splitter.
- Operates in the full CWDM wavelength range.
- Suitable for all signal types.
- No power totally passive.
- Connections made by SC/PC connectors.

Technical Specifications

IRT Eurocard module Type OFX-4042

Type Wavelengths Fibre Connector type Insertion loss		50/50 optical splitter. CWDM range – 1300nm to 1620nm. Single mode. SC/PC. < 3.9 dB.
Other		
Temperature range		0 - 50° C ambient.
Mechanical		Suitable for mounting in IRT 19" 1RU or 4000 series 3RU rack chassis with input and output connections on the rear panel.
Finish	Front panel	Grey background, black lettering & red IRT logo.
	Rear assembly	Common connection mounted on bracket from main PCB.
Dimensions		6 HP x 3 U x 220 mm IRT Eurocard.

Due to our policy of continuing development, these specifications are subject to change without notice.

Installation

Installation in frame or chassis:

See details in separate manual for selected frame type.

Signal Connections:

The OFX-4042 comes standard with SC/PC connectors.

Connect a fibre transmitter to the OFX-4042 input port via an optical patch lead with the correct optical connectors to match both the OFX-4042 and fibre transmitter.

To the two output ports connect one end of the two optical fibres, either directly or via optical patch leads. At the far end of the fibres connect the corresponding fibre receivers to match that of the fibre transmitter.

All IRT fibre transmitter/receiver pairs can be used with the OFX-4042.

When calculating the maximum fibre length that can be run with the chosen fibre transmitter/receiver pair, remember to subtract the OFX-4042 insertion loss (3.9dB) to the maximum allowed optical fibre loss.

Depending on where the two fibres have been run, optical receivers can be located at two separate locations, or at the same location where fibres may have been run by two independent paths for optical fibre redundancy.

Note that it is not necessary to terminate an unused output. Number of outputs used can be anything from one to two.

Front & rear panel connector diagrams

The following front panel and rear assembly drawings are not to scale and are intended to show connection order and approximate layout only.



Maintenance:

No regular maintenance is required.

Care however should be taken to ensure that all connectors are kept clean and free from contamination of any kind. This is especially important in fibre optic equipment where cleanliness of optical connections is critical to performance.

Storage:

If the equipment is not to be used for an extended period, it is recommended the whole unit be placed in a sealed plastic bag to prevent dust contamination. In areas of high humidity a suitably sized bag of silica gel should be included to deter corrosion.

Where individual circuit cards are stored, they should be placed in antistatic bags. Proper antistatic procedures should be followed when inserting or removing cards from these bags.

Warranty & Service

Equipment is covered by a limited warranty period of three years from date of first delivery unless contrary conditions apply under a particular contract of supply. For situations when "No **Fault Found**" for repairs, a minimum charge of 1 hour's labour, at IRT's current labour charge rate, will apply, whether the equipment is within the warranty period or not.

Equipment warranty is limited to faults attributable to defects in original design or manufacture. Warranty on components shall be extended by IRT only to the extent obtainable from the component supplier.

Equipment return:

Before arranging service, ensure that the fault is in the unit to be serviced and not in associated equipment. If possible, confirm this by substitution.

Before returning equipment contact should be made with IRT or your local agent to determine whether the equipment can be serviced in the field or should be returned for repair.

The equipment should be properly packed for return observing antistatic procedures.

The following information should accompany the unit to be returned:

- 1. A fault report should be included indicating the nature of the fault
- 2. The operating conditions under which the fault initially occurred.
- 3. Any additional information, which may be of assistance in fault location and remedy.
- 4. A contact name and telephone and fax numbers.
- 5. Details of payment method for items not covered by warranty.
- 6. Full return address.
- 7. For situations when "No **Fault Found"** for repairs, a minimum charge of 1 hour's labour will apply, whether the equipment is within the warranty period or not. Contact IRT for current hourly rate.

Please note that all freight charges are the responsibility of the customer.

The equipment should be returned to the agent who originally supplied the equipment or, where this is not possible, to IRT direct as follows.

Equipment Service IRT Electronics Pty Ltd 26 Hotham Parade ARTARMON N.S.W. 2064 AUSTRALIA

 Phone:
 61 2 9439 3744
 Fax:
 61 2 9439 7439

 Email:
 service@irtelectronics.com
 Fax:
 61 2 9439 7439