

8 Channel ASI / SD-SDI Fibre Optic Link



User Manual

Table of Contents:

Section	Page
Revision History	2
Operational Safety	4
openGear® Introduction	4
General Description	5
Technical Specifications	6
Configuration	7
DIP Switch Settings	7
Installation	8
Signal Inputs & Outputs	8
Fibre Optics Connection	8
Front Edge LED and Switch Location	9
Rear Assembly Layouts	10
Operation	11
IRT-6690-DDT	11
IRT-6690-DDR	11
DashBoard™ Software Control	12
IRT-6690-DDT DashBoard™ Screenshots	12
IRT-6690-DDR DashBoard™ Screenshots	15
SNMP Software Control	18
IRT-6690-DDT SNMP Functions	18
IRT-6690-DDR SNMP Functions	20
Maintenance & Storage	22
Warranty & Service	22

This instruction book applies to units fitted with firmware \geq Revision 2.1.

WARNING

Operation of electronic equipment involves the use of voltages and currents that may be dangerous to human life. Note that under certain conditions dangerous potentials may exist in some circuits when power controls are in the **OFF** position. Maintenance personnel should observe all safety regulations.

Do not make any adjustments inside equipment with power **ON** unless proper precautions are observed. All internal adjustments should only be made by suitably qualified personnel. All operational adjustments are available externally without the need for removing covers or use of extender cards.

openGear® INTRODUCTION

Developed by Ross Video, openGear® is a standard where various manufacturers can design their equipment to fit a common frame allowing the end user to mix and match the various openGear® cards available in the market place together in one frame. This allows a single frame to be used instead of multiple different vendor's frames that each would otherwise be using their own proprietary standard.

A simple to use monitoring and control software called DashBoard™ is a free program downloadable from the openGear® website (www.opengear.tv) that allows the user to remotely monitor and control an openGear® type card fitted within an openGear® frame that meets the openGear® standard for DashBoard™ control. A link is also supplied via the IRT Electronics website (www.irtelectronics.com) under the openGear® navigation section.

IRT Electronics' openGear® cards are designed to meet the openGear® standard for mounting within the openGear® OG3-FR frame and its earlier version DFR-8300 frame, and is fully compliant with DashBoard™ control.

The openGear® frame manual, DashBoard™ control software and information regarding the frame's power supplies, controller card and frame accessories are available for download at the openGear® website.


The term openGear® is a registered trade mark of Ross Video Limited.

DashBoard software Control™ is a trade mark of Ross Video Limited.

IRT-6690-DDT & IRT-6690-DDR

GENERAL DESCRIPTION

BLOCK DIAGRAM IRT-6690-DDT & IRT-6690-DDR SIGNAL PATH

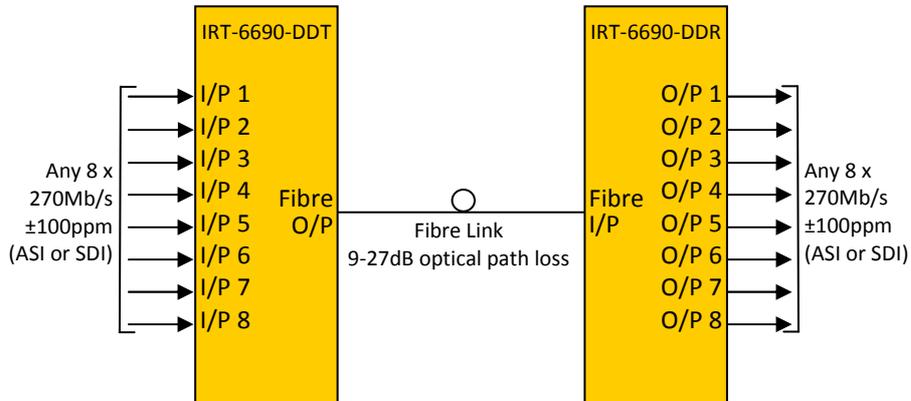

The IRT-6690-DDT accepts up to eight 270 Mb/s input signals which may be ASI, SDI or a mixture of each type. The signals need not be phase or frequency synchronous.

The signals are multiplexed into a single 2.97 Gb/s stream and transmitted optically via a single mode fibre. The IRT-6690-DDR receiver performs the reverse operation and restores correct 270 Mb/s timing.

The IRT-6690-DDT/IRT-6690-DDR system is primarily designed for use with a 9/125µm single mode fibre and will allow an optical path loss up to 27dB.

The IRT-6690-DDT transmitter comes standard with a 1310nm DFB laser. Other CWDM wavelengths are available. The IRT-6690-DDR receiver comes standard with an APD detector.

The IRT-6690-DDT & IRT-6690-DDR are designed to fit the openGear® standard 2RU frames which allow a mixture of cards from various manufacturers to be mounted within the same frame.

The DashBoard™ control software is available as a free download.

Standard features:

- 270 Mb/s type signals, such as ASI and SDI, capability.
- Automatic cable equalisation for up to 300m on each input.
- Optical path loss \geq 27dB.
- DashBoard™ software monitoring and control.

Applications:

- Multichannel digital on a single fibre.
- Upgrade capacity of existing fibre.
- Maintain timing between related signals by ensuring same path transmission delay.

IRT-6690-DDT & IRT-6690-DDR

TECHNICAL SPECIFICATIONS

IRT-6690-DDT:

Inputs:

Type	8 x independent ASI or SD-SDI.
Equalisation	Automatic for up to 300 m of Belden 8281 or equivalent cable.
Connectors	BNC 75Ω.

Outputs:

Type	1 x 2.97 Gb/s optical
------	-----------------------

IRT-6690-DDR:

Inputs:

Type	1 x 2.97 Gb/s optical.
------	------------------------

Outputs:

Type	8 x independent ASI or SD-SDI.
Connectors	BNC 75Ω.

Optical:

IRT-6690-DDT optical output	0 dBm +4.5/-0 dB CWDM DFB laser,
IRT-6690-DDR optical input	APD detector (standard), -9 to -27 dBm input level.
Available wavelengths	CWDM DFB laser - 1270nm, 1290nm, 1310nm (standard), 1330nm, 1350nm, 1370nm, 1390nm, 1410nm, 1430nm, 1450nm, 1470nm, 1490nm, 1510nm, 1530nm, 1550nm, 1570nm, 1590nm & 1610nm.
Optical path loss ¹	9 to 27 dB APD detector (standard), or 3 to 18 dB PIN detector.
Optical fibre	Designed for use with 9/125 μm single mode fibre.
Optical connectors	1 x SC/PC (standard) on rear - direct connection to main card.

Power Requirements:

Voltage	+ 12 Vdc.
Power consumption	IRT-6690-DDT < 6.5 VA, IRT-6690-DDR < 6 VA.

Other:

Temperature range	0 - 50° C ambient.
Mechanical	Suitable for mounting in an openGear® 2RU rack chassis.
Dimensions (openGear® standard)	33.6 mm x 2U x 325 mm.


Supplied accessories	Rear connector assembly.
----------------------	--------------------------

Ordering	IRT-6690-DDT	IRT-6690-DDT, programmed with DashBoard™ control.
	IRT-6690-DDT/xxxx	IRT-6690-DDT, fitted with CWDM DFB laser other than 1310nm where xxxx = wavelength required. For example, IRT-6690-DDT/1550 is an IRT-6690-DDT fitted with a 1550nm laser.
	IRT-6690-DDR	IRT-6690-DDR fitted with APD detector, programmed with DashBoard™ control.
	IRT-6690-DDR/PIN	IRT-6690-DDR fitted with PIN detector, programmed with DashBoard™ control.
Note:	1	Optical attenuator supplied for IRT-6690-DDR when optical path loss is less than 9dB for the APD detector and 3dB for the PIN detector.

IRT-6690-DDT & IRT-6690-DDR

CONFIGURATION

DIP Switch settings:

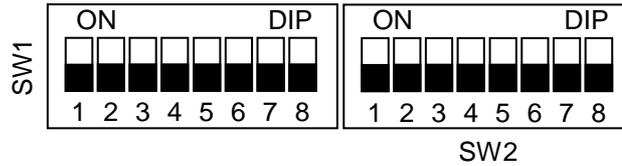

IRT-6690-DDT & IRT-6690-DDR:

- SW1-1** Not Used.
- SW1-2** Not Used.
- SW1-3** Not Used.
- SW1-4** Not Used.
- SW1-5** Not Used.
- SW1-6** Not Used.
- SW1-7** **OFF** DashBoard™/SNMP Control – Can disable individual channels and channel Traps.
ON DIP Switch Control – All channels are enabled (unless locked via DashBoard™/SNMP or DIP Switch SW2 settings). Channel & Product Alias and SNMP I/O Alarm Trap still settable via DashBoard™/SNMP regardless of SW1-7 switch position.
- SW1-8** Not Used.

DIP Switch SW2-1 to SW2-8 only functional when set for DIP Switch Control (SW1-7 = ON).

- SW2-1** **OFF** Channel 1 enabled.
ON Channel 1 disabled.
- SW2-2** **OFF** Channel 2 enabled.
ON Channel 2 disabled.
- SW2-3** **OFF** Channel 3 enabled.
ON Channel 3 disabled.
- SW2-4** **OFF** Channel 4 enabled.
ON Channel 4 disabled.
- SW2-5** **OFF** Channel 5 enabled.
ON Channel 5 disabled.
- SW2-6** **OFF** Channel 6 enabled.
ON Channel 6 disabled.
- SW2-7** **OFF** Channel 7 enabled.
ON Channel 7 disabled.
- SW2-8** **OFF** Channel 8 enabled.
ON Channel 8 disabled.

INSTALLATION

Pre-installation:

Handling:

This equipment may contain or be connected to static sensitive devices and proper static free handling precautions should be observed.

Where individual circuit cards are stored, they should be placed in antistatic bags. Proper antistatic procedures should be followed when inserting or removing cards from these bags.

Installation in openGear® frame:

See details in separate manual downloadable from the openGear® website (www.opengear.tv).

Signal Inputs & Outputs:

Up to eight 270Mb/s type of signals, such as ASI, SDI, or a combination of both, are fed into 75 Ω BNC connectors on the rear connector panel of the IRT-6690-DDT. Unused inputs are best terminated with a 75 Ω termination to avoid spurious noise being sent to the receiver where the front edge LEDs could illuminate and give the false impression that there is a signal on that line.

The corresponding outputs are by 75 Ω BNC connectors on the IRT-6690-DDR rear connector panel. Output numbers on the IRT-6690-DDR correspond to the input numbers on the IRT-6690-DDT. There is no need to terminate the unused channel outputs on the IRT-6690-DDR.

Fibre Optic Connection:

The optical connectors on the IRT-6690-DDT & IRT-6690-DDR are attached to the main module PCB, NOT the rear connector assembly.

When installing the optical fibre sufficient slack should be allowed for the module to be withdrawn with the optical fibre attached until the connector is clear of the frame and can be disconnected.

If this is not done, the module will not be able to be removed without first disconnecting the optical fibre at the rear. Attempting to remove the module without first disconnecting the fibre may result in damage to the fibre and / or the module.


Note that for path lengths ≤ 9 dB for APD detectors, or ≤ 3 dB for PIN detectors, an optical attenuator must be used to avoid over driving the IRT-6690-DDR detector.

IRT-6690-DDT & IRT-6690-DDR

Front Edge LED and Switch Locations

Green/Red LED: GREEN – Communication with frame’s Network card.
RED - No communication with Network card / No Network card.

Front Edge LED Indicators
In this situation, all 8 inputs/outputs are present.

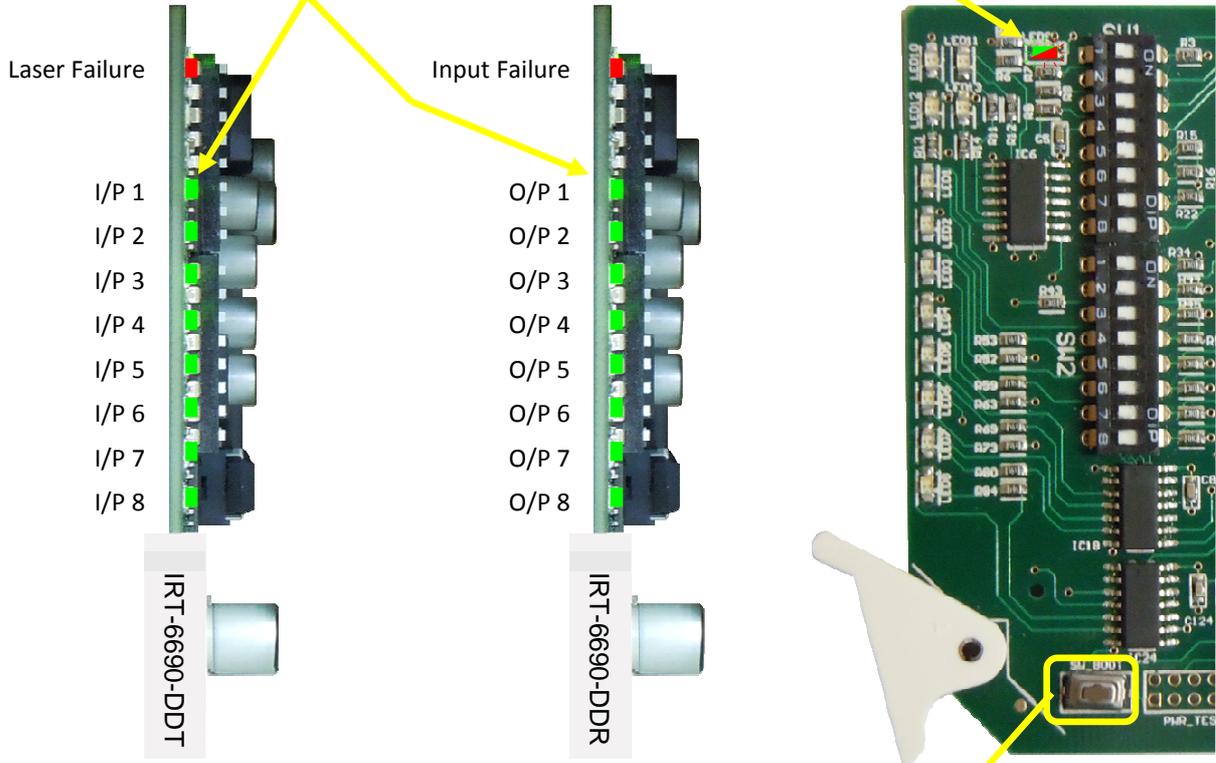

SW_boot switch: Default Reset Switch.


User set names and switch position are stored within memory so that in the event of a loss of power this information is restored on resumption of power.

If the default Reset Switch is pressed whilst powering or inserting the card, the IRT-6690-DDT or IRT-6690-DDR will default to factory preset names and channel settings.

IRT-6690-DDT & IRT-6690-DDR

Rear Assembly Layouts

The IRT-6690-DDT and IRT-6690-DDR share a common generic rear assembly where the electrical signal BNC ports are labelled as 'CH-1' to 'CH-8'. Whether these correspond to an Input or an Output depends on which card the rear assembly is fitted to.

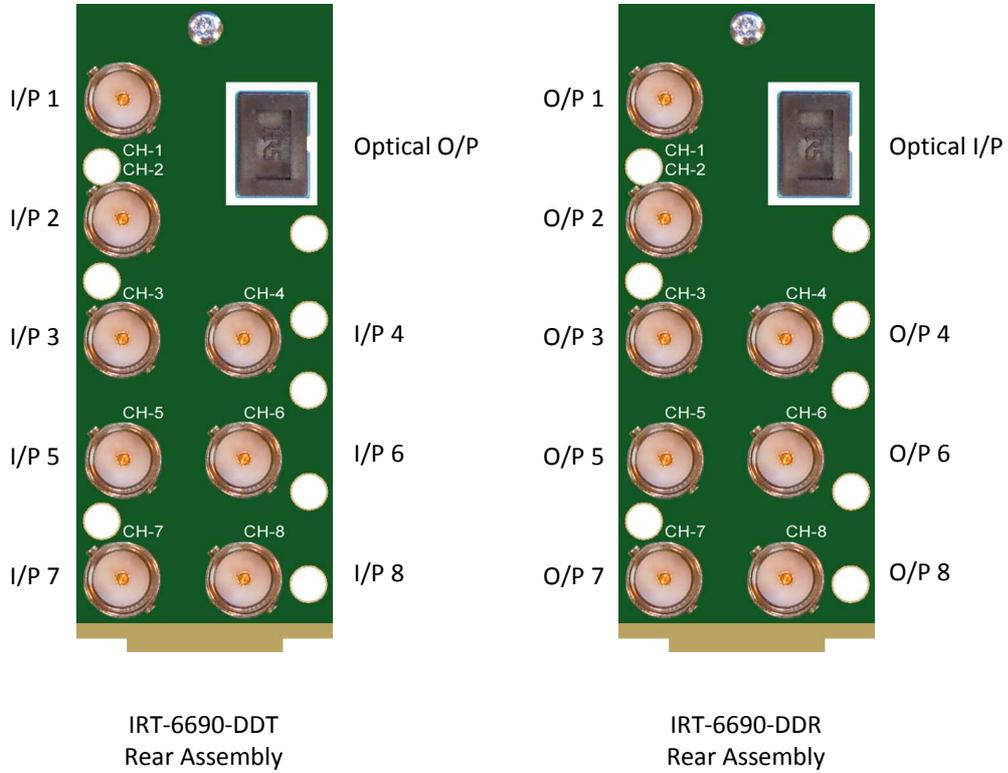

IRT-6690-DDT & IRT-6690-DDR

OPERATION


IRT-6690-DDT:

The IRT-6690-DDT will accept up to eight 270Mb/s type signals such as ASI or SD-SDI on the rear assembly inputs marked 'CH-1' to 'CH-8'. Input signals may all be of the same type or a mixture of types just so long as they are all at the 270Mb/s rate. It is recommended that unused inputs be terminated by 75 Ω BNC terminators so as to minimise spurious signal pickup which may cause a false signal indication.

Front edge green LED's light up when a signal has been detected on the corresponding input. A red Laser Failure LED at the top of the board indicates if the laser has failed.

The input electrical signals are time division multiplexed together and converted to a 2.97 Gb/s optical signal, which is outputted on an SC/PC (default standard) optical connector at the rear of the module.

Individual inputs can be disabled via SNMP or the free DashBoard™ software application available from the openGear® website (www.opengear.tv). This allows a limitation to be placed on the number of available channels allowed to be used. Alternatively a DIP switch setting disables the DashBoard™ control so that DashBoard™ can only be used for monitoring purposes - other than naming of card and inputs. When DashBoard™ control has been disabled, all inputs are enabled unless individually disabled via the DIP switch SW2 settings. When a channel has been disabled, provided a signal has been detected on the channel, the corresponding LED will flash.

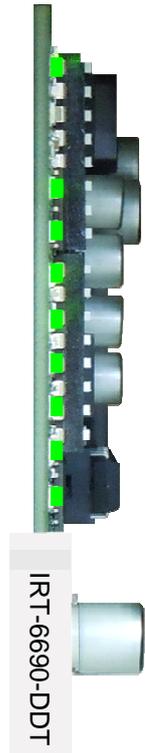

IRT-6690-DDR:

The IRT-6690-DDR receiver accepts an optical input signal from an IRT-6690-DDT transmitter via the SC/PC (default standard) optical connector on the rear of the module. The optical signal is converted into electrical form where electrical signals that have been time division multiplexed on the IRT-6690-DDT are de-multiplexed into the same order as originally encoded and outputted on the BNC connectors on the rear assembly marked as 'CH-1' to 'CH-8'.

Green front edge LEDs light up when a signal within the stream is detected. A red Optical Input Failure LED at the top of the board indicates if no optical input has been detected. When the optical level is approaching the minimum input level, the optical alarm LED will flash green to indicate an Optical Low state. Alarm thresholds can vary between detectors so signal integrity should be checked if an Optical Low indication is observed as a matter of precaution.

For path lengths <9dB optical loss when using an APD detector, or <3dB optical loss when using a PIN detector, an optical attenuator is required. The length of fibre that this corresponds to depends on the fibre loss characteristics at the relevant wavelength of the laser module chosen. For example, if the fibre loss characteristic of the chosen fibre is 0.2dB per kilometre at 1550 nm, say, then the maximum distance that can be run is 135 km (27dB/0.2dB/km), although connector losses, such as through patch lead connectors etc., should also be taken into consideration when calculating maximum distances. Actual attenuation versus wavelength characteristics depends upon optic fibre manufacturer's own specifications. Also a few dB headroom is recommended to allow for the effects of laser aging over time.

Individual outputs can be disabled via SNMP or via the free DashBoard™ software application available from the openGear® website (www.opengear.tv). This allows a limitation to be placed on the number of available channels allowed to be used. Alternatively a DIP switch setting disables the DashBoard™ control so that DashBoard™ can only be used for monitoring purposes - other than naming of card and outputs. When DashBoard™ control has been disabled, all outputs are enabled unless individually disabled via the DIP switch SW2 settings. When a channel has been disabled, provided a signal has been detected on the channel, the corresponding LED will flash.




IRT-6690-DDT & IRT-6690-DDR

DashBoard™ SOFTWARE CONTROL

The DashBoard™ Control and Monitoring System is a free application designed for remote control and monitoring of the openGear® platform. This is a free application downloadable from the openGear® website (www.opengear.tv). As such, configuration of the DashBoard™ program will not be described here. The DashBoard™ manual is also downloadable from the openGear® website.

IRT-6690-DDT DashBoard™ Screenshots:


Basic Tree View:

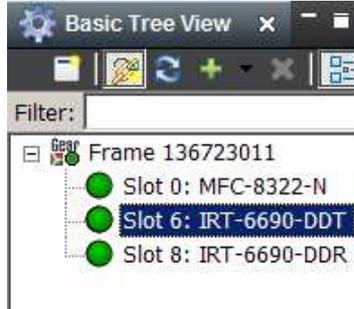

On the left the basic tree view shows the frame. With the tree structure expanded a list of cards within the frame is shown. In this example, slot position 6 is highlighted. All sections and tabs to the right of the basic tree view now relate to the card in slot position 6, in this case the IRT-6690-DDT. The name of the card, in this case IRT-6690-DDT, can be set under the Configuration TAB setting.

Product TAB:

Self explanatory. Note that the Product Alias field can be set under the Configuration TAB setting.

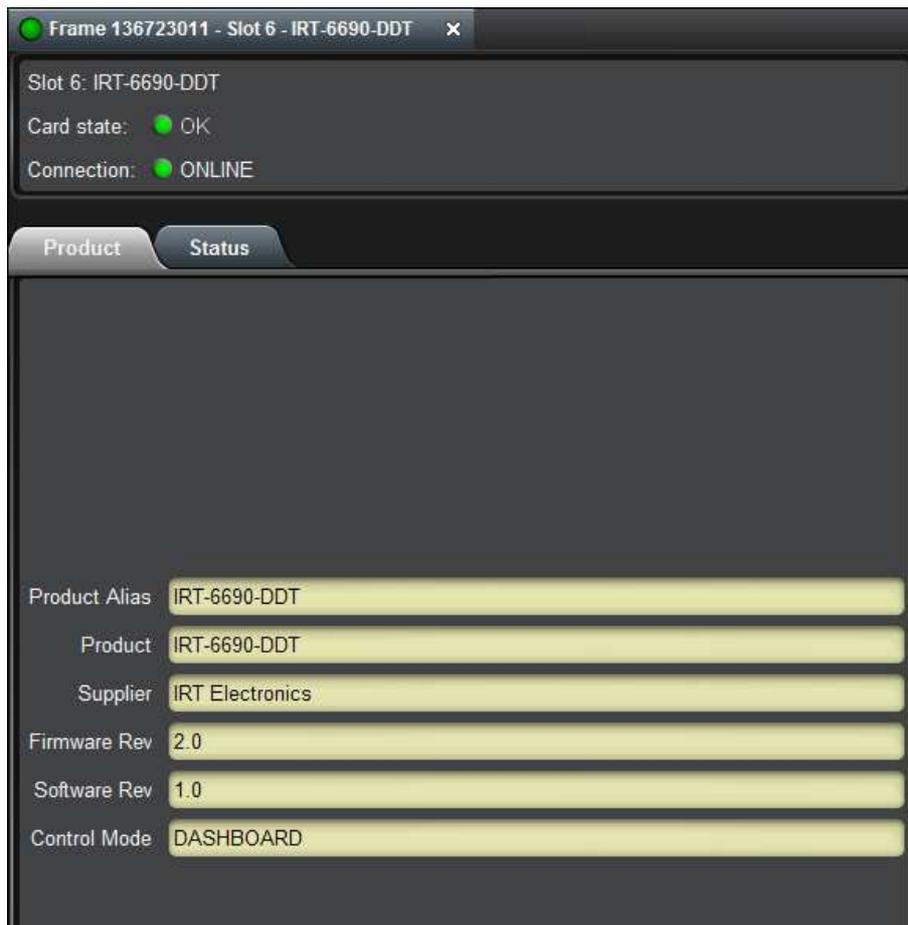

IRT-6690-DDT & IRT-6690-DDR

Status TAB:

Status TAB shows the set input names (Alias) corresponding to each input channel number, these being set under the Configuration TAB in the second half of the DashBoard™ frame (see next screenshot), as well as information about the optical laser fitted and the status of the channel inputs.

Frame 136723011 - Slot 6 - IRT-6690-DDT

Slot 6: IRT-6690-DDT

Card state: ● OK

Connection: ● ONLINE

Product | **Status**

Rear Assembly ● Match

I/O Alarm: ● OK

	Optical Status	WaveLength
Optical	● GOOD	1310nm

	Alias	Channel Status
Channel 1	CHANNEL 1	● PRESENT
Channel 2	CHANNEL 2	● PRESENT
Channel 3	CHANNEL 3	● PRESENT
Channel 4	CHANNEL 4	● PRESENT
Channel 5	CHANNEL 5	● PRESENT
Channel 6	CHANNEL 6	● PRESENT
Channel 7	CHANNEL 7	● PRESENT
Channel 8	CHANNEL 8	● PRESENT

IRT-6690-DDT & IRT-6690-DDR

Config TAB:

Under the Configuration TAB parameters such as Product Alias (name) and channel names (Channel Alias) can be user set. Click computer mouse into the field to change and type new name.

Channels can also be individually enabled or disabled, as well as TRAP generations.


The screenshot shows the 'Config' tab interface. At the top, there is a 'Product Alias' field containing 'IRT-6690-DDT' and a 'Device' button labeled 'RESET'. Below these are radio buttons for 'SNMP I/O Alarm Trap' (selected 'Enable') and 'Control Mode' (selected 'DashBoard', with 'PCB Switches' and 'LockToDashBoard' also visible). The main section is titled 'CHANNEL SETTINGS' and contains a table with 8 rows, each representing a channel. Each row has three columns: 'Channel Alias', 'Channel Enable', and 'Channel Trap'. Each 'Channel Alias' field contains the text 'CHANNEL X' (where X is the channel number). Each 'Channel Enable' column has two radio buttons, 'ENABLE' and 'DISABLE', with 'ENABLE' selected. Each 'Channel Trap' column has two radio buttons, 'DISABLE' and 'ENABLE', with 'DISABLE' selected.

	Channel Alias	Channel Enable	Channel Trap
Channel 1	CHANNEL 1	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input checked="" type="radio"/> DISABLE <input type="radio"/> ENABLE
Channel 2	CHANNEL 2	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input checked="" type="radio"/> DISABLE <input type="radio"/> ENABLE
Channel 3	CHANNEL 3	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input checked="" type="radio"/> DISABLE <input type="radio"/> ENABLE
Channel 4	CHANNEL 4	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input checked="" type="radio"/> DISABLE <input type="radio"/> ENABLE
Channel 5	CHANNEL 5	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input checked="" type="radio"/> DISABLE <input type="radio"/> ENABLE
Channel 6	CHANNEL 6	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input checked="" type="radio"/> DISABLE <input type="radio"/> ENABLE
Channel 7	CHANNEL 7	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input checked="" type="radio"/> DISABLE <input type="radio"/> ENABLE
Channel 8	CHANNEL 8	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input checked="" type="radio"/> DISABLE <input type="radio"/> ENABLE

IRT-6690-DDT & IRT-6690-DDR

IRT-6690-DDR Dashboard™ Screenshots:


Basic Tree View:

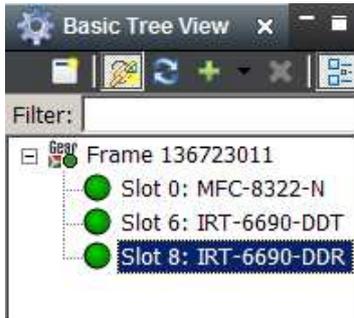

On the left the basic tree view shows the frame. With the tree structure expanded a list of cards within the frame is shown. In this example, slot position 8 is highlighted. All sections and tabs to the right of the basic tree view now relate to the card in slot position 8, in this case the IRT-6690-DDR. The name of the card, in this case IRT-6690-DDR, can be set under the Configuration TAB setting.

Product TAB:

Self explanatory. Note that the Product Alias field can be set under the Configuration TAB setting.

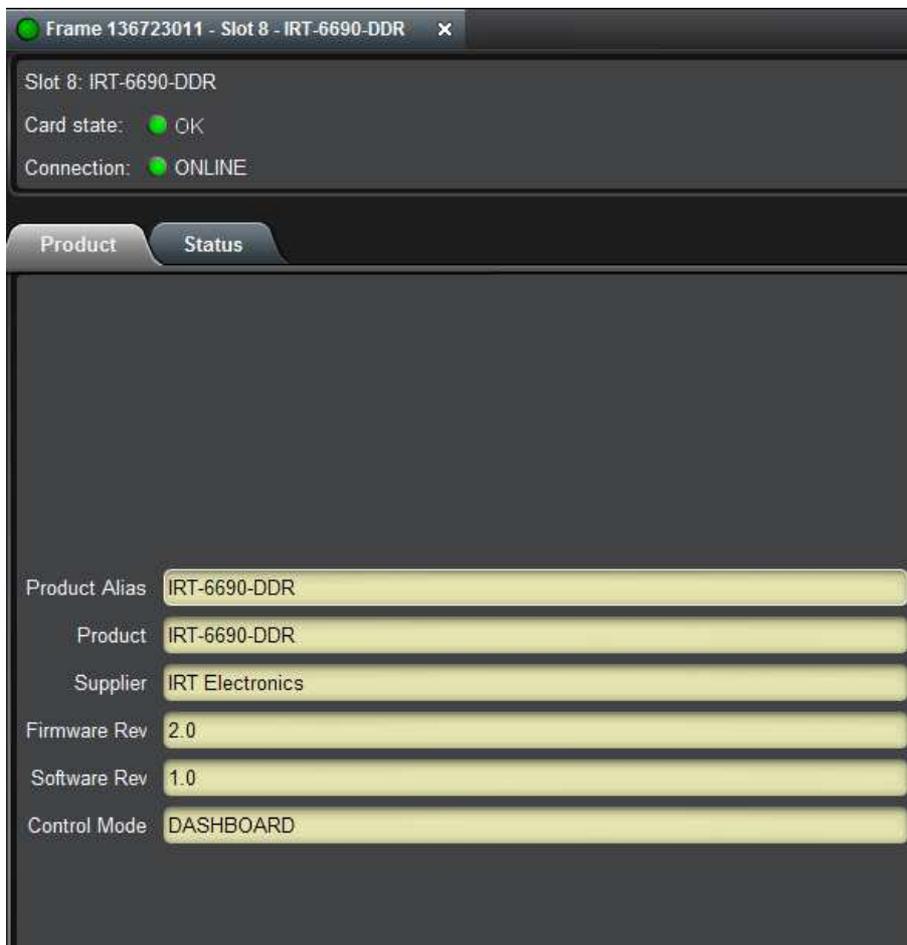

IRT-6690-DDT & IRT-6690-DDR

Status TAB:

Status TAB shows the set output names (Alias) corresponding to each output channel number, these being set under the Configuration TAB in the second half of the DashBoard™ frame (see next screenshot), as well as information about the optical detector fitted and the status of the channel outputs.

Frame 136723011 - Slot 8 - IRT-6690-DDR

Slot 8: IRT-6690-DDR

Card state: ● OK

Connection: ● ONLINE

Product | **Status**

Rear Assembly: ● Match

I/O Alarm: ● OK

	Optical Status	Detector
Optical	● GOOD	APD

	Alias	Channel Status
Channel 1	CHANNEL 1	● PRESENT
Channel 2	CHANNEL 2	● PRESENT
Channel 3	CHANNEL 3	● PRESENT
Channel 4	CHANNEL 4	● PRESENT
Channel 5	CHANNEL 5	● PRESENT
Channel 6	CHANNEL 6	● PRESENT
Channel 7	CHANNEL 7	● PRESENT
Channel 8	CHANNEL 8	● PRESENT

IRT-6690-DDT & IRT-6690-DDR

Config TAB:

Under the Configuration TAB parameters such as Product Alias (name) and channel names (Channel Alias) can be user set. Click computer mouse into the field to change and type new name.

Channels can also be individually enabled or disabled, as well as TRAP generations.

The screenshot shows the 'Config' tab interface. At the top, there is a 'Product Alias' field containing 'IRT-6690-DDR' and a 'Device' button labeled 'RESET'. Below these are two rows of radio button options: 'SNMP I/O Alarm Trap' with 'Enable' selected and 'Disable' unselected; and 'Control Mode' with 'DashBoard' selected, 'PCB Switches' unselected, and 'LockToDashBoard' unselected. The main section is titled 'CHANNEL SETTINGS' and contains a table with three columns: 'Channel Alias', 'Channel Enable', and 'Channel Trap'. There are eight rows, one for each channel from Channel 1 to Channel 8. Each row has a text input field for the channel alias (all containing 'CHANNEL X'), and two sets of radio buttons for 'Channel Enable' (with 'ENABLE' selected) and 'Channel Trap' (with 'DISABLE' selected).

	Channel Alias	Channel Enable	Channel Trap
Channel 1	CHANNEL 1	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input type="radio"/> DISABLE <input checked="" type="radio"/> ENABLE
Channel 2	CHANNEL 2	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input type="radio"/> DISABLE <input checked="" type="radio"/> ENABLE
Channel 3	CHANNEL 3	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input type="radio"/> DISABLE <input checked="" type="radio"/> ENABLE
Channel 4	CHANNEL 4	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input type="radio"/> DISABLE <input checked="" type="radio"/> ENABLE
Channel 5	CHANNEL 5	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input type="radio"/> DISABLE <input checked="" type="radio"/> ENABLE
Channel 6	CHANNEL 6	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input type="radio"/> DISABLE <input checked="" type="radio"/> ENABLE
Channel 7	CHANNEL 7	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input type="radio"/> DISABLE <input checked="" type="radio"/> ENABLE
Channel 8	CHANNEL 8	<input checked="" type="radio"/> ENABLE <input type="radio"/> DISABLE	<input type="radio"/> DISABLE <input checked="" type="radio"/> ENABLE

IRT-6690-DDT & IRT-6690-DDR

SNMP SOFTWARE CONTROL

Control via SNMP is possible via a third party Network Management System (NMS) provided the openGear® frame is fitted with a relevant Network Management card. In the case of the OG3-FR frame the MFC-8322-NS network management card is required for SNMP control. In the case of either the DFR-8310 or DFR-8321 frames either the MFC-8310-NS or MFC-8320-NS cards are required for SNMP control. Relevant frame MIBs and card MIB required to interface to NMS software - see IRT Electronics website (www.irtelectronics.com) for MIB download.

IRT-6690-DDT SNMP Functions:

The following SNMP functions are capable of being controlled and monitored by an NMS:

irt6690DDTProductTable: A table containing product info for all IRT-6690-DDT cards at this node.

- productAlias** - An indication and control of the Alias (Name) of this card.
- boardRev** - An indication of the hardware (board) revision of this card.
- softwareRev** - An indication of the software revision of this card.

irt6690DDTStatusTable: A table containing alarm status for all IRT-6690-DDT cards at this node.

- rearassembly** - An indication whether the card is inserted into the correct rear assembly or not:
 - (1) match: Card is inserted into correct rear assembly.
 - (2) mismatch: Card is inserted into incorrect rear assembly.
- ioAlarm** - An indication of the alarm status of this card:
 - (0) noAlarm: No alarms present.
 - (1) opticalFail: Laser output has failed.
 - (2) allChannelsAbsent: No valid input signals are present.
 - (3) opticalFailAllChannelsAbsent: Laser output has failed and no valid input signals are present.

irt6690DDTSettingsTable: A table containing configuration settings for all IRT-6690-DDT cards at this node.

- controlMode** - An indication of the control settings made as per the PCB DIP switch setting:
 - (0) dashboardSNMP: Card settings can be controlled via DashBoard™ or SNMP.
 - (1) pcbSwitches: Card settings as per DIP switch settings only.
 - (2) lockedtoDashboardSNMP: Lock module to DashBoard™ or SNMP control – overrides SW1-7 position. Note that SW1-7 must be initially ON to be able to set to Lock to SNMP mode. To release send either a (0) or (1).
- ioAlarmTrapEnable** - An indication and control of Trap enable/disable function of input/output alarms:
 - (0) ioAlarmTrapDisable: Disable input/output alarm Traps.
 - (1) ioAlarmTrapEnable: Enable input/output alarm Traps.
- reset** - Unit reset control:
 - (0) normal: when queried reset control returns a 'normal' state.
 - (1) reset: system reset causes a reset of the card.

opticalSettingsTable: A table containing information about the optical components fitted to the card.

- laserWavelength** - Wavelength information about the transmitter section:
 - (1) nm1470Laser: IRT-6690-DDT fitted with a 1470nm wavelength laser.
 - (2) nm1490Laser: IRT-6690-DDT fitted with a 1490nm wavelength laser.
 - (3) nm1510Laser: IRT-6690-DDT fitted with a 1510nm wavelength laser.
 - (4) nm1530Laser: IRT-6690-DDT fitted with a 1530nm wavelength laser.
 - (5) nm1550Laser: IRT-6690-DDT fitted with a 1550nm wavelength laser.
 - (6) nm1570Laser: IRT-6690-DDT fitted with a 1570nm wavelength laser.
 - (7) nm1590Laser: IRT-6690-DDT fitted with a 1590nm wavelength laser.
 - (8) nm1610Laser: IRT-6690-DDT fitted with a 1610nm wavelength laser.
 - (15) nm1310Laser: IRT-6690-DDT fitted with a 1310nm wavelength laser.
 - (16) *wideband: Not applicable to the IRT-6690-DDT.*
 - (17) unknown: IRT-6690-DDT fitted with a wavelength laser not matching any of the above.
 - (18) *na: Not applicable to the IRT-6690-DDT.*

IRT-6690-DDT & IRT-6690-DDR

opticalStatus - An indication of the status of the transmitter output:
GOOD
FAIL.

inputPresentTable: A table containing information about the input status and settings.

channel1Present - An indication of the status of the signal connected to the CH-1 input.
channel2Present - An indication of the status of the signal connected to the CH-2 input.
channel3Present - An indication of the status of the signal connected to the CH-3 input.
channel4Present - An indication of the status of the signal connected to the CH-4 input.
channel5Present - An indication of the status of the signal connected to the CH-5 input.
channel6Present - An indication of the status of the signal connected to the CH-6 input.
channel7Present - An indication of the status of the signal connected to the CH-7 input.
channel8Present - An indication of the status of the signal connected to the CH-8 input.
PRESENT
NOT PRESENT

channelEnableTable: A table containing information about the channel state settings.

channel1Enable - An indication and control of the channel enable function for CH-1 input.
channel2Enable - An indication and control of the channel enable function for CH-2 input.
channel3Enable - An indication and control of the channel enable function for CH-3 input.
channel4Enable - An indication and control of the channel enable function for CH-4 input.
channel5Enable - An indication and control of the channel enable function for CH-5 input.
channel6Enable - An indication and control of the channel enable function for CH-6 input.
channel7Enable - An indication and control of the channel enable function for CH-7 input.
channel8Enable - An indication and control of the channel enable function for CH-8 input.
(0) disabled: Input channel disabled. Note: LED corresponding to input will flash if channel is disabled and input signal is present.
(1) enabled: Input channel is enabled.

channelAliasTable: A table containing information about the channel aliases.

channel1Alias - Set and read the Alias (name) for the CH-1 input signal.
channel2Alias - Set and read the Alias (name) for the CH-2 input signal.
channel3Alias - Set and read the Alias (name) for the CH-3 input signal.
channel4Alias - Set and read the Alias (name) for the CH-4 input signal.
channel5Alias - Set and read the Alias (name) for the CH-5 input signal.
channel6Alias - Set and read the Alias (name) for the CH-6 input signal.
channel7Alias - Set and read the Alias (name) for the CH-7 input signal.
channel8Alias - Set and read the Alias (name) for the CH-8 input signal.

channelTrapTable: A table containing information about the channel Traps.

channel1TrapEnable - Set and read the Trap enable state for the CH-1 input signal.
channel2 TrapEnable - Set and read the Trap enable state for the CH-2 input signal.
channel3 TrapEnable - Set and read the Trap enable state for the CH-3 input signal.
channel4 TrapEnable - Set and read the Trap enable state for the CH-4 input signal.
channel5 TrapEnable - Set and read the Trap enable state for the CH-5 input signal.
channel6 TrapEnable - Set and read the Trap enable state for the CH-6 input signal.
channel7 TrapEnable - Set and read the Trap enable state for the CH-7 input signal.
channel8 TrapEnable - Set and read the Trap enable state for the CH-8 input signal.
(0) disabled: Trap generation on change of channel input state disabled.
(1) enabled: Trap generation on change of channel input state enabled.

IRT-6690-DDT & IRT-6690-DDR

IRT-6690-DDR SNMP Functions:

The following SNMP functions are capable of being controlled and monitored by an NMS:

irt6690DDRProductTable: A table containing product info for all IRT-6690-DDR cards at this node.

- productAlias** - An indication and control of the Alias (Name) of this card.
- boardRev** - An indication of the hardware (board) revision of this card.
- softwareRev** - An indication of the software revision of this card.

irt6690DDRStatusTable: A table containing alarm status for all IRT-6690-DDR cards at this node.

- rearassembly** - An indication whether the card is inserted into the correct rear assembly or not:
 - (1) match: Card is inserted into correct rear assembly.
 - (2) mismatch: Card is inserted into incorrect rear assembly.
- ioAlarm** - An indication of the alarm status of this card:
 - (0) noAlarm: No alarms present.
 - (1) opticalFail: Optical input to the receiver's detector is below its minimum threshold or has failed.
 - (2) opticalLowAllChannelsAbsent: Optical detector of receiver is reporting that the optical input signal is approaching its minimum, or has exceeded its, allowable signal strength; and no valid signal has been received by the receiver.
NOTE: Detectors can vary in their reporting of optical low state. It is recommended to confirm that the received signal is error free if an Optical Low alarm has been raised.
 - (4) allChannelsAbsent: No valid signal has been received by the receiver.
 - (8) opticalLow: Optical detector of receiver is reporting that the optical input signal is approaching its minimum, or has exceeded its, allowable signal strength.
NOTE: Detectors can vary in their reporting of optical low state. It is recommended to confirm that the received signal is error free if an Optical Low alarm has been raised.

irt6690DDRSettingsTable: A table containing configuration settings for all IRT-6690-DDR cards at this node.

- controlMode** - An indication of the control settings made as per the PCB DIP switch setting:
 - (0) dashboardSNMP: Card settings can be controlled via DashBoard™ or SNMP.
 - (1) pcbSwitches: Card settings as per DIP switch settings only.
 - (2) lockedtoDashboardSNMP: Lock module to DashBoard™ or SNMP control – overrides SW1-7 position. Note that SW1-7 must be initially ON to be able to set to Lock to SNMP mode. To release send either a (0) or (1).
- ioAlarmTrapEnable** - An indication and control of Trap enable/disable function of input/output alarms:
 - (0) ioAlarmTrapDisable: Disable input/output alarm Traps.
 - (1) ioAlarmTrapEnable: Enable input/output alarm Traps.
- reset** - Unit reset control:
 - (0) normal: when queried reset control returns a 'normal' state.
 - (1) reset: system reset causes a reset of the card.

opticalSettingsTable: A table containing information about the optical components fitted to the card.

- optical1Component** - Detector type of the receiver:
 - (1) pinDetector: IRT-6630-DDR fitted with a PIN detector.
 - (2) apdDetector: IRT-6630-DDR fitted with an APD detector.
 - (3) na: Not applicable. No detector fitted.
- opticalStatus** - An indication of the status of the receiver optical input:
 - GOOD
 - LOW
 - FAIL.

IRT-6690-DDT & IRT-6690-DDR

inputPresentTable: A table containing information about the received signal status.

channel1Present	- An indication of the status of the signal presence at the CH-1 output.
channel2Present	- An indication of the status of the signal presence at the CH-2 output.
channel3Present	- An indication of the status of the signal presence at the CH-3 output.
channel4Present	- An indication of the status of the signal presence at the CH-4 output.
channel5Present	- An indication of the status of the signal presence at the CH-5 output.
channel6Present	- An indication of the status of the signal presence at the CH-6 output.
channel7Present	- An indication of the status of the signal presence at the CH-7 output.
channel8Present	- An indication of the status of the signal presence at the CH-8 output.

PRESENT
NOT PRESENT

channelEnableTable: A table containing information about the channel state settings.

channel1Enable	- An indication and control of the channel enable function for CH-1 output.
channel2Enable	- An indication and control of the channel enable function for CH-2 output.
channel3Enable	- An indication and control of the channel enable function for CH-3 output.
channel4Enable	- An indication and control of the channel enable function for CH-4 output.
channel5Enable	- An indication and control of the channel enable function for CH-5 output.
channel6Enable	- An indication and control of the channel enable function for CH-6 output.
channel7Enable	- An indication and control of the channel enable function for CH-7 output.
channel8Enable	- An indication and control of the channel enable function for CH-8 output.

(0) disabled: Input channel disabled. Note: LED corresponding to input will flash if channel is disabled and input signal is present.
(1) enabled: Input channel is enabled.

channelAliasTable: A table containing information about the channel aliases.

channel1Alias	- Set and read the Alias (name) for the CH-1 output signal.
channel2Alias	- Set and read the Alias (name) for the CH-2 output signal.
channel3Alias	- Set and read the Alias (name) for the CH-3 output signal.
channel4Alias	- Set and read the Alias (name) for the CH-4 output signal.
channel5Alias	- Set and read the Alias (name) for the CH-5 output signal.
channel6Alias	- Set and read the Alias (name) for the CH-6 output signal.
channel7Alias	- Set and read the Alias (name) for the CH-7 output signal.
channel8Alias	- Set and read the Alias (name) for the CH-8 output signal.

channelTrapTable: A table containing information about the channel Traps.

channel1TrapEnable	- Set and read the Trap enable state for the CH-1 output signal.
channel2 TrapEnable	- Set and read the Trap enable state for the CH-2 output signal.
channel3 TrapEnable	- Set and read the Trap enable state for the CH-3 output signal.
channel4 TrapEnable	- Set and read the Trap enable state for the CH-4 output signal.
channel5 TrapEnable	- Set and read the Trap enable state for the CH-5 output signal.
channel6 TrapEnable	- Set and read the Trap enable state for the CH-6 output signal.
channel7 TrapEnable	- Set and read the Trap enable state for the CH-7 output signal.
channel8 TrapEnable	- Set and read the Trap enable state for the CH-8 output signal.

(0) disabled: Trap generation on change of channel input state disabled.
(1) enabled: Trap generation on change of channel input state enabled.

MAINTENANCE & STORAGE

Maintenance:

No regular maintenance is required.

Care however should be taken to ensure that all connectors are kept clean and free from contamination of any kind. This is especially important in fibre optic equipment where cleanliness of optical connections is critical to performance.

Storage:

If the equipment is not to be used for an extended period, it is recommended the whole unit be placed in a sealed plastic bag to prevent dust contamination. In areas of high humidity a suitably sized bag of silica gel should be included to deter corrosion.

Where individual circuit cards are stored, they should be placed in antistatic bags. Proper antistatic procedures should be followed when inserting or removing cards from these bags.

WARRANTY & SERVICE

Equipment is covered by a limited warranty period of three years from date of first delivery unless contrary conditions apply under a particular contract of supply. For situations when “**No Fault Found**” for repairs, a minimum charge of 1 hour’s labour, at IRT’s current labour charge rate, will apply, whether the equipment is within the warranty period or not.

Equipment warranty is limited to faults attributable to defects in original design or manufacture. Warranty on components shall be extended by IRT only to the extent obtainable from the component supplier.

Equipment return:

Before arranging service, ensure that the fault is in the unit to be serviced and not in associated equipment. If possible, confirm this by substitution.

Before returning equipment contact should be made with IRT or your local agent to determine whether the equipment can be serviced in the field or should be returned for repair.

The equipment should be properly packed for return observing antistatic procedures.

The following information should accompany the unit to be returned:

1. A fault report should be included indicating the nature of the fault
2. The operating conditions under which the fault initially occurred.
3. Any additional information, which may be of assistance in fault location and remedy.
4. A contact name and telephone and fax numbers.
5. Details of payment method for items not covered by warranty.
6. Full return address.
7. For situations when “**No Fault Found**” for repairs, a minimum charge of 1 hour’s labour will apply, whether the equipment is within the warranty period or not. Contact IRT for current hourly rate.

Please note that all freight charges are the responsibility of the customer.

The equipment should be returned **to the agent who originally supplied the equipment** or, where this is not possible, to IRT directly. Details of IRT’s direct address can be found at IRT Electronics’ website.

Web address: www.irtelectronics.com

Email: sales@irtelectronics.com