



IRT Electronics Pty Ltd A.B.N. 35 000 832 575
26 Hotham Parade, ARTARMON N.S.W. 2064 AUSTRALIA
National: Phone: (02) 9439 3744 Fax: (02) 9439 7439
International: +61 2 9439 3744 +61 2 9439 7439
Email: sales@irtelectronics.com
Web: www.irtelectronics.com

IRT -SNMP GUI SETUP

Designed and manufactured in Australia

**IRT can be found on the Internet at:
<http://www.irtelectronics.com>**

Setting Up the IRT SNMP Program:


Step 1:

Click Setup.exe and follow the prompts



Step 2:

In the directory where the program has been loaded go to the MIBs Folder and place all the IRT MIBs in that Folder.

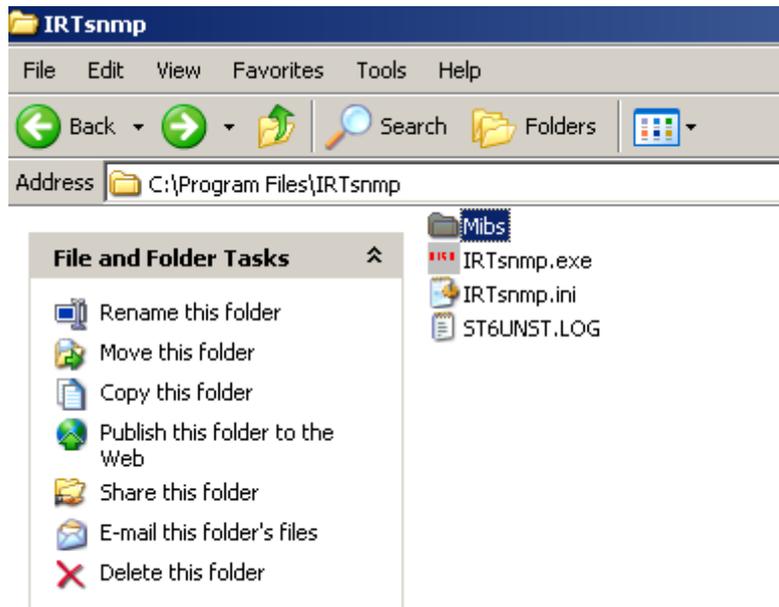


Working with IRT SNMP:

Start IRT Snmp Software and Setup the Frame

Step 1: Ensure MIBs are loaded correctly


Click MIBs and you should see the MIBs listed as per figure below.

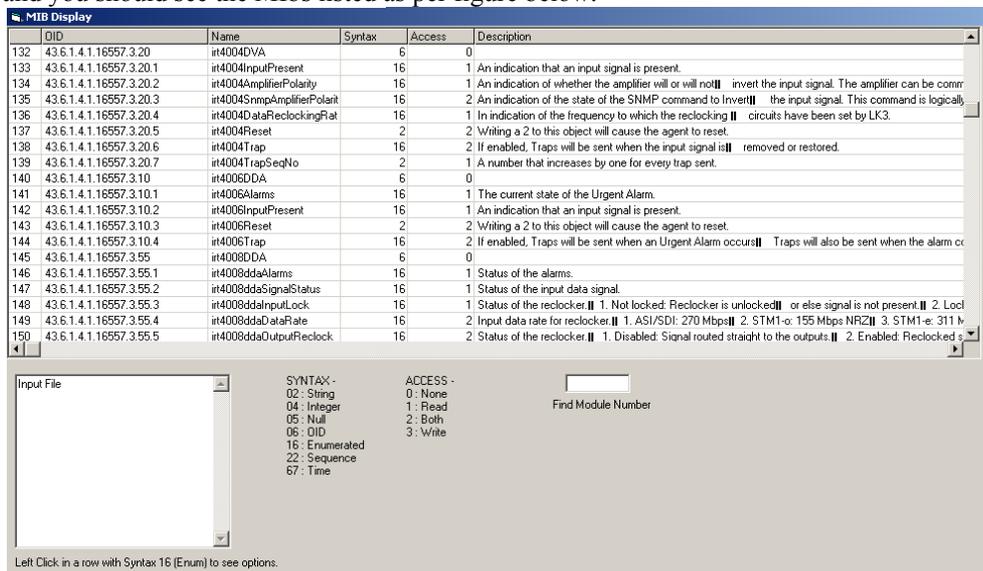

Step 2: Set- up a frame



In order to start communicating to a frame the following steps should be followed:

- 1- Options > SNMP Connection Options
- 2- Click on the cell in the Ip address Column and type the relevant CDM-4001 IP address
- 3- Frame name can be changed
- 4- After each modification press Enter
- 5- Save

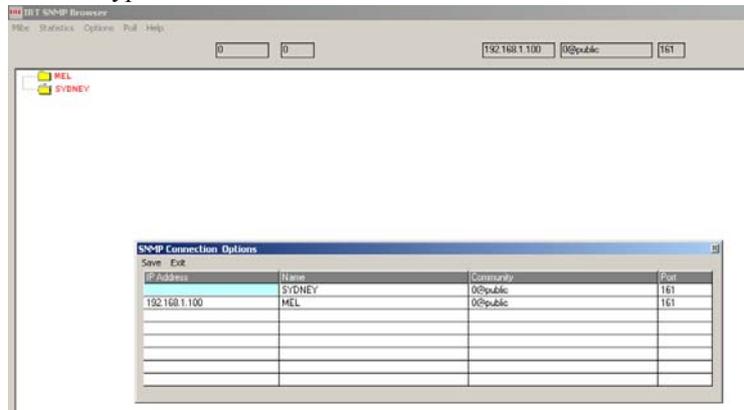


Interrogating a Frame:


In the main screen any annotation in RED means you can click on it and do modifications.

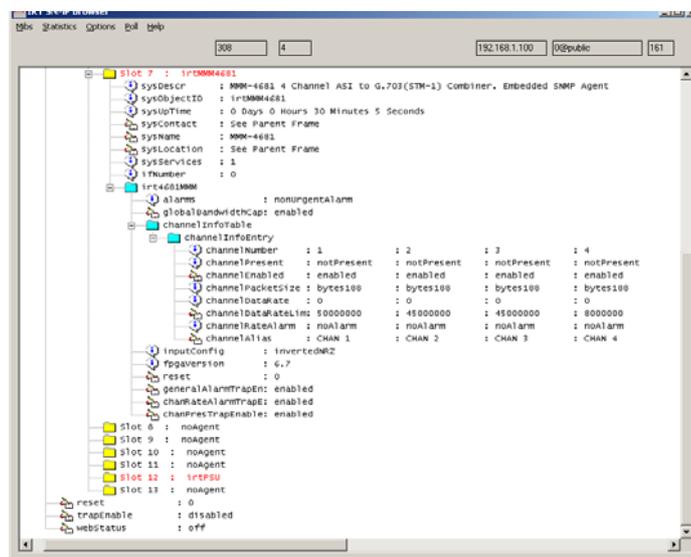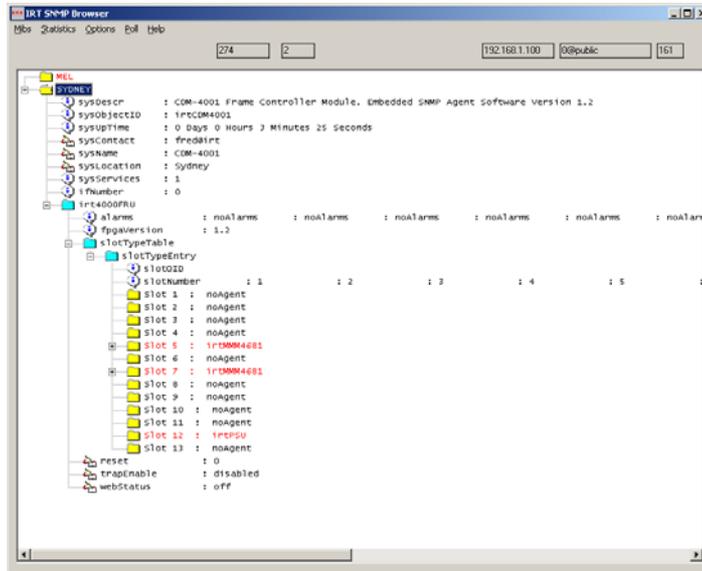


To change setting double click on the required field to be changed and options will be displayed . Please note a Right Click would give a description of the field.

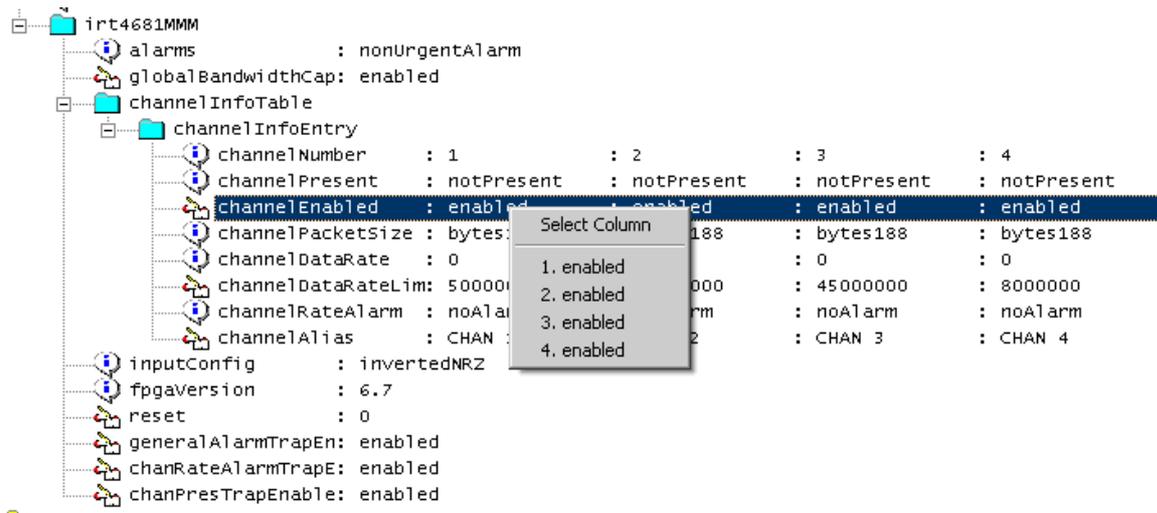

Right Click View

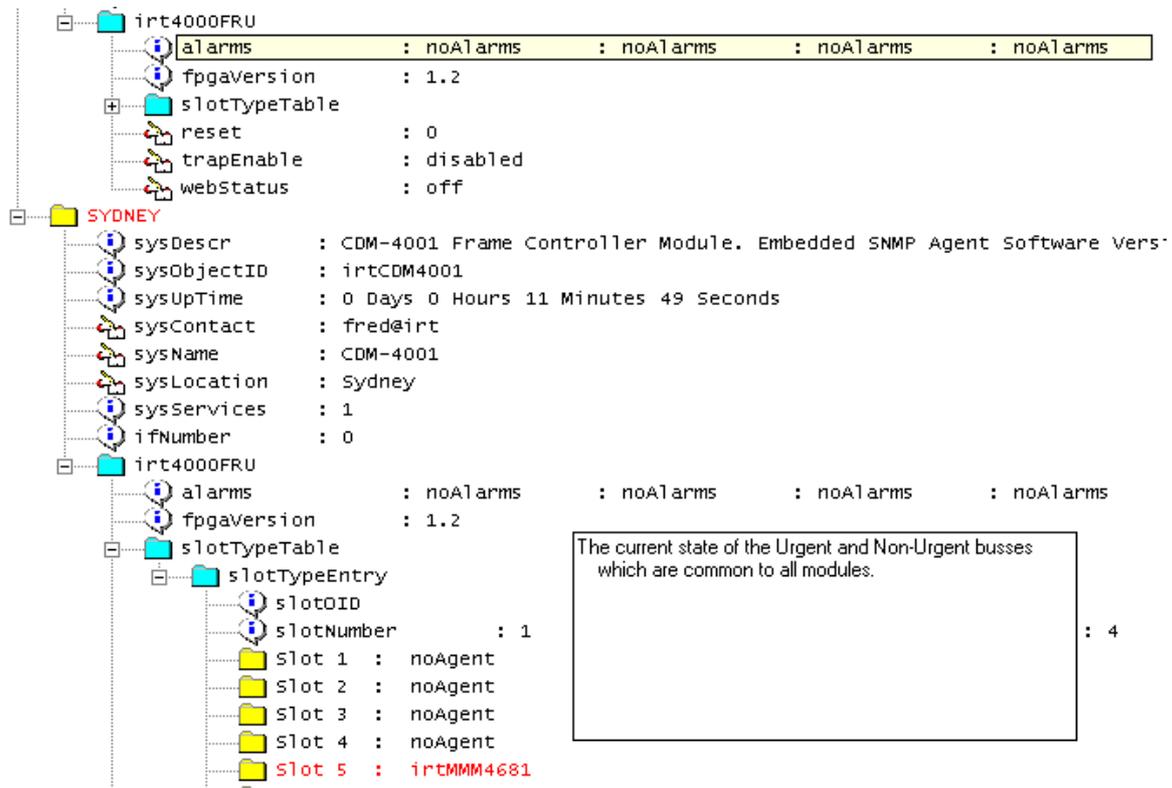

To Poll a frame on a regular basis to get updated status: Poll > Selected Slot Poll

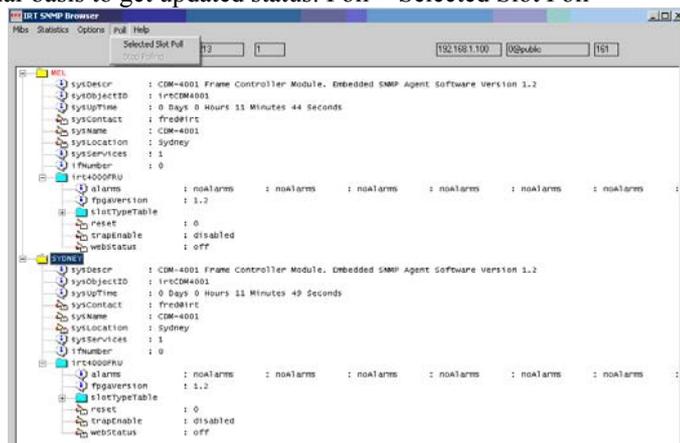

Enabling Trap Receiver:

Traps > Traps On

